



Single, Spring-Loaded, Locking Lever Re-Tightening Instructions


If the boot and carriage require additional tightening after locking into place, follow the instructions below to re-tighten. **Do Not Remove Center Screw.**

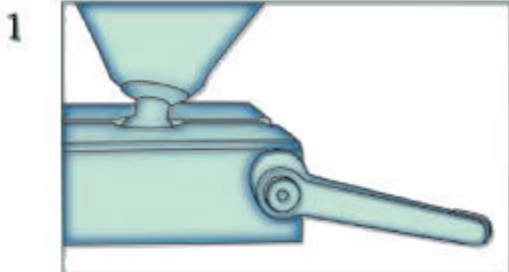


Starting with the lever in the locked position as shown, but ball of boot and carriage are not tight enough,

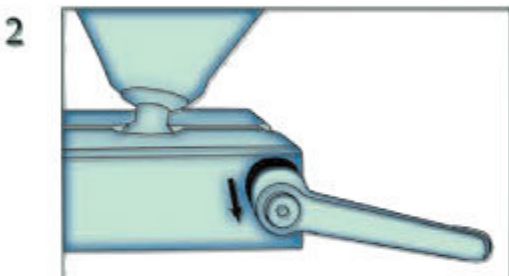

Pull spring-loaded lever toward you

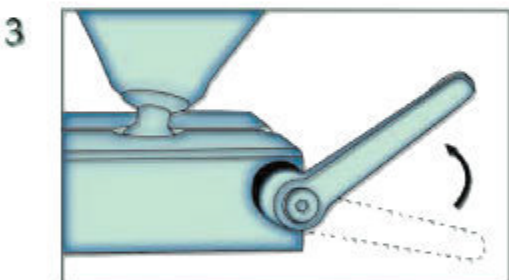

Rotate, counter-clockwise, while holding in the pulled-out position

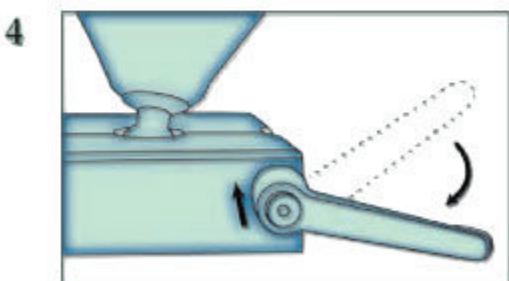

Release, at desired position snapping into gear, and

Tighten, until locked.

